

BlackBerry 7105t™ Getting Started Guide



How do I navigate?

Roll the trackwheel to move the cursor and highlight items on the screen.

← **Click (press) the trackwheel** to open the menu or select items.

← **Press the Escape button** to exit a screen, cancel an action, or go back one page in the browser.

How do I type?







 

To type using SureType™ technology, press each letter key only once until you have typed an entire word. The letters on the screen change automatically until a word is formed.

To: Beth Visram
Subject: Welcome
Welcome Welcome ▶▶






To switch to the multi-tap input method, in a text field, hold the * key. Press a key once for the first letter and twice for the second letter.

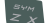Tips

Phone

- Open the phone screen or make a phone call Press 
- End a call Press 
- Turn mute on and off during a call Press 
- Change the volume during a call Roll the trackwheel
- Dial a letter in a phone number Hold  + Press the letter (once for the first letter, twice for the second letter, using the multi-tap method)
- Redial a number Press  twice
- Call voice mail Hold 
- Assign speed dial to a number Hold the number > Type a phone number
- Type a phone number extension Press  > Type the extension number
- Turn speakerphone on or off during a call Press 






Browser

- Go back one page Press the **Escape** button
- Exit the browser Hold the **Escape** button
- Go to the next page in the history Press 
- Go to the previous page in the history Press 
- Switch between normal and full-screen mode Press 
- Page down Press 
- Stop a web page from loading Press the **Escape** button
- Go to a specific web page Press 

Messages

- Compose from the messages list Press 
- Reply to sender Press 
- Reply to all Press 
- Forward a message Press 
- Go to the next message Press 
- Go to the previous message Press 
- View received messages Press  + 
- View SMS messages Press  + 
- View voice mail messages Press  + 
- Page up in an open message Press 
- Page down in an open message Press 

Calendar*

- Go to the next day, week, or month Press 
- Go to the previous day, week, or month Press 
- Schedule an appointment Press 
- Move the cursor horizontally in week view Hold  + Roll the trackwheel
- Move the cursor vertically in month view Hold  + Roll the trackwheel

*In the calendar options, set the **Enable Quick Entry** field to **No** to use these shortcuts in Day format.

Note: The arrangement of letters on your device keypad might vary slightly from the depictions on this document.

Navigating your handheld



- Lock the device/keyboard Hold or Click **Lock** (set a password for added security)
- Unlock the device/keyboard Press + or Double-click the trackwheel
- Move the cursor Roll the trackwheel or Press + Roll the trackwheel
- Return to the previous screen Press the **Escape** button
- Return to the Home screen Press
- Click an item Highlight the item > Click the trackwheel
- Select multiple items Hold + Roll the trackwheel
- Switch between applications Hold + Press the **Escape** button
- Go to the top of a screen Press
- Go to the bottom of a screen Press
- Turn on/off the device Hold the **Power** button

Typing and editing



- Type using SureType™ technology Type the whole word. Press each letter key only once.
- Type using multi-tap input method Press a key once for the first letter. Press a key twice for the second letter.
- Move through the list that appears when you type Press
- Select an item from the list that appears when you type Press
- Capitalize a letter Hold the letter
- Insert a period Press twice
- Type the alternate character on a key Press + the key
- Insert a symbol Press + > Press a letter or Press + again to see more symbols
- Insert an accented character Hold a letter + Roll the trackwheel
- Switch between the multi-tap and SureType™ input methods In a text field, hold

Wireless network coverage

To turn the wireless radio on or off, in **Settings**, click **Turn Wireless On**/**Turn Wireless Off**.



	GPRS	GPRS	GSM
Emergency calls	●	●	●
SMS messages	●	●	●
Phone	●	●	●
Email and PIN messages	●		
Browser	●		

Status indicators

- full battery power
- low battery power
- charging
- roaming
- Home Zone
- receiving data
- transmitting data
- service book waiting
- alarm set
- voice mail message
- TTY enabled
- Bluetooth® radio on
- Bluetooth connected
- Number lock on
- Shift mode on
- Alt mode on
- Multi-tap mode on

How do I...

Make a phone call

1. On the Home screen, type a phone number.
2. Press the **Send** key.
3. To end the call, press the **End key**.

Send an email message

1. In the messages list, click the trackwheel.
2. Click **Compose Email**.
3. Click **[Use Once]**.
4. Click **Email**.
5. In the email field, type an email address.
6. Click the trackwheel.
7. Click **Continue**.
8. In the **Subject** field, type a subject.
9. Press the **Enter** key.
10. Type a message.
11. Click the trackwheel.
12. Click **Send**.

Add a contact

1. In the address book, click the trackwheel.
2. Click **New Address**.
3. Type the contact information.
4. Click the trackwheel.
5. Click **Save**.

Navigate the Home screen

- 1. Click **Applications** to access help, tasks, memos, BrickBreaker, and other applications.
- 2. Click **Settings** to access device options, and to turn the wireless radio on or off.

Set a password

1. In **Settings**, click **Options**.
2. Click **Security**.
3. Set the **Password** field to **Enabled**.
4. Set the security options.
5. Click the trackwheel.
6. Click **Save**.
7. Type a password.
8. Press the **Enter** key.
9. Type the password again.
10. Click the trackwheel.

Tip: Type passwords using the multi-tap input method. Press a key once for the first letter and twice for the second letter.

Fields

Address Book Options	
Sort By:	First Name
Confirm Delete:	Yes
Allow Duplicate Names:	Yes
Number of Entries:	5

Press the **Space** key to change the value in a field.

Press the **Alt** key to view all the values that are available in the selected field.

Menus

May 12, 2004 12:21	
09:00	Hide Menu
10:00	Today
11:00	Go to Date...
12:00	Prev Day
13:00	Next Day
14:00	Prev Week
15:00	Next Week
16:00	New
17:00	View Week
	View Month
	View Agenda
	Options
	Help
	Close

Click the trackwheel to view the menu.

On the menu, click standard actions such as **New**, **View**, **Edit**, **Delete**, **Save**, **Options**, and **Help**. Additional options might appear depending on the item you have selected.

Contents

Where can I find more information?

On the device

- On the menu, click **Help** to see help topics associated with the application that you are using.
- On any Help screen, click the trackwheel. Click **Index** to see a list of additional help topics.

In the BlackBerry Desktop Software

- On the **Help** menu, click **Desktop Help Contents** to view the *User Guide* or the *BlackBerry Desktop Software Online Help*.

In your BlackBerry Internet Service account using a desktop browser

- On the menu bar, click **Help** to view the *BlackBerry Internet Service Online Help*.

Setting up your device	2
Insert the SIM card	2
Insert the battery	2
Charge the battery	3
Turn wireless on	3
Setting up for email	5
Synchronize your device data	5
Frequently asked questions	6

 
Setting up your device

Insert the SIM card


Your SIM card contains important information about your wireless service. Your SIM card might be inserted already.

Warning: Turn off your device before you insert or remove the SIM card. Do not scratch, bend, or expose the SIM card to static electricity or wet conditions.


1. Press the battery cover release button.

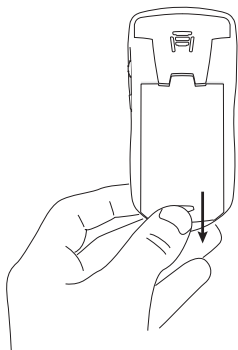

 2. Slide off the battery cover.
3. If the battery is inserted, remove it.
4. Remove your SIM card from its packaging.
5. Hold the SIM card with the metal contacts facing down so that the notches on the card align with the notches in the SIM card holder on your device.

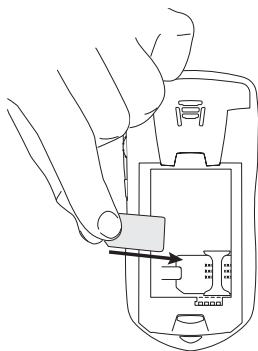

 6. Slide the SIM card into the holder so that it lies flat below the metal guide.

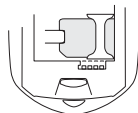


Note: To remove the SIM card, hold the tab and slide the SIM card out of the holder.

Insert the battery

Warning: Use only the battery that Research In Motion specifies for use with your device. See the *Safety and Product Information* booklet that accompanied your device for more information on using the battery safely.

 1. Press the battery cover release button.
2. Slide off the battery cover.
3. Insert the battery so that the connectors align.

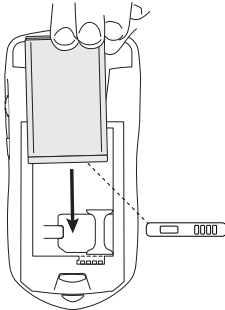

4. Replace the battery cover. If the battery is charged, your device turns on and a dialog box appears.
5. Click **OK**.

If the date and time are incorrect, see "How do I correct the date and time?" on page 6 for more information.

 
Charge the battery

Using the travel charger

1. Connect the smaller end of the USB cable to your device.



2. If your travel charger includes a removable USB cable, connect the larger end of the USB cable to the power adapter.
3. Slide the appropriate attachment piece into the power adapter.

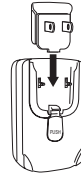

4. Plug the power adapter into a power outlet.
5. Charge the battery to full power.

Using your computer

To charge your device using the computer, the following system requirements must be met:

- Intel®-compatible 486 or higher computer that is compliant with USB 1.1 or later
- Available USB port. If the port is part of a USB hub, the hub must be self powered.
- Windows®98, Windows ME, Windows 2000, or Windows XP
- BlackBerry Desktop Software or BlackBerry Device Manager must be installed to obtain the required USB driver on your computer. See "Setting up for email" on page 5 for more information.

Note: If you use Windows 98 (not Windows 98 Second Edition), you must download an update from http://www.microsoft.com/com/dcom/dcom98/dcom1_3.asp for the USB driver to operate as expected.

1. Connect the smaller end of the USB cable to your device.
2. Connect the larger end of the USB cable to an available USB port on your computer.
3. Charge the battery to full power.

Turn wireless on

Your device connects to the wireless network using an internal radio.

When your SIM card is inserted and the battery is charged, turn on the radio in a wireless coverage area. See the inside front cover of this guide for information on wireless coverage levels and the wireless radio.

Note: The account setup process might begin automatically the first time that you turn on the wireless radio. See "Setting up for email" on page 5 for more information.

Setting up for email

Consult your service provider's documentation for more information on setting up BlackBerry Internet Service.

Synchronize your device data

Install the BlackBerry Desktop Software to synchronize and back up device personal information management (PIM) data such as contacts and appointments, or to reconcile the status of messages.

1. Insert the BlackBerry Desktop Software Installation CD into your CD drive.
2. Complete the on-screen instructions.
 - Select **BlackBerry Internet Service** as your account integration option.
3. Connect your device to your computer.
4. On the Windows taskbar, click **Start**.
5. Click **Programs > BlackBerry > Desktop Manager**.

Note: See the *BlackBerry Desktop Software Online Help* for more information on PIM synchronization.

Frequently asked questions

Why does my device not turn on?

The power might be off. Press the **Power** button to turn the power on.

The battery might not be charged. See "Charge the battery" on page 3 for more information.

Remove and then reinsert the battery.

Why does my device not charge?

A connection might not be secure. Check that all cables and plugs are fully inserted into ports and power outlets. See "Charge the battery" on page 3 for more information.

The battery might not be inserted properly. Reinsert the battery so that the connectors align.

How do I correct the date and time?

1. In the device options, click **Date/Time**.
2. Set the date and time.
3. Click the trackwheel.
4. Click **Save**.

Why is there a book icon on the Home screen?

A new service book is available on your device. Service books determine which services and features are available on your device.

1. In the device options, click **Service Book**.
2. Click the service book beside the book icon.
3. Click **Accept**.

Why does the device screen turn off?

When you do not use your device for a period of time, the screen turns off to conserve battery power. Roll the trackwheel or press any key to turn the screen on again.

Why can I not send or receive messages?

Verify that the device wireless radio is on and that you are in a wireless coverage area. See the inside front cover of this guide for more information on the wireless radio and levels of wireless coverage.

Verify that you have integrated your device with an email account. See "Setting up for email" on page 5 for more information.

How do I connect my device to the BlackBerry Desktop Software?

If the desktop software is installed on your computer, your device should connect to the desktop software automatically when you connect your device to the computer. If your device does not connect, open the BlackBerry Desktop Software.

1. Click **Options > Connection Settings**.
2. In the drop-down list, click the correct port.
3. Click **Connect**.

If the connection problems continue, close the BlackBerry Desktop Software and disconnect your device. Open the desktop software again and reconnect your device. Verify that all connections are secure.

What is the BlackBerry Desktop Redirector?

If you use Microsoft Outlook (Workgroup installation) with an account on a Microsoft Exchange Server version 5.5 or later and your device is not enabled on a BlackBerry Enterprise Server, you can use the BlackBerry Desktop Redirector to set up for email on your device.

1. Insert the BlackBerry Desktop Software Installation CD into your CD drive.
2. Complete the on-screen instructions.

- Select **BlackBerry Enterprise Server** or **BlackBerry Desktop Redirector** as your account integration option.
 - Select **BlackBerry Desktop Redirector** as your message redirection option.
3. Connect your device to your computer.
 4. On the Windows taskbar, click **Start**.
 5. Click **Programs > BlackBerry > Desktop Manager**.
 - When you are prompted to generate an encryption key, follow the on-screen instructions.

Your computer must be on and the BlackBerry Desktop Redirector must be running to send and receive messages on your device.

How do I reset my device?

Only reset your device if the device does not respond for more than a few minutes, or if your system administrator or service provider has advised you to reset your device.

To reset your device hardware and programs, remove and then reinsert the battery.

Customer support

BlackBerry support web site:

www.blackberry.com/support

©2005 Research In Motion Limited. All Rights Reserved. The BlackBerry and RIM families of related marks, images, and symbols are the exclusive properties of, and trademarks of, Research In Motion Limited (RIM). All other brands and marks are the properties of their respective owners. IBM, Lotus, Domino, and Lotus Notes are trademarks of International Business Machines Corporation in the United States, other countries, or both. Novell and GroupWise are registered trademarks of Novell, Inc. in the United States and other countries. Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries. Microsoft, Outlook, and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Research In Motion Limited is under license. T-MOBILE is a registered trademark of Deutsche Telekom AG. There are no warranties, express or implied, with respect to the contents of this document, and all information provided herein is provided "as is". In no event shall RIM or its affiliates be liable to any party for any direct, indirect, special, or consequential damages in connection with your use of this document, including, without limitation, loss of business revenue or earnings, lost data, damages caused by delays, lost profits, or a failure to realize expected savings, even if RIM was expressly advised of the possibility of such damages. RIM reserves the right to periodically change information that is contained in this document; however, RIM makes no commitment to provide any such changes in a timely manner or at all. Your handheld might vary from the depictions on this card.

Published in XXXXX.
PRINTSPEC-005
MAT-10131-001
Model number: RAQ43GW

